


OVANO TABLE LEG INSTALLATION

TOOLS REQUIRED

PH2 screwdriver bit
PH3 screwdriver bit
Battery Screwdriver
NOT AN IMPACT DRIVER

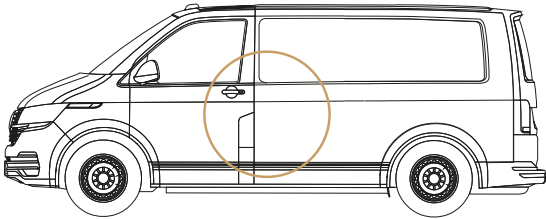

Point of installation:
inside van behind B pillar
on passenger side

INCLUDED IN KIT




A PLY BRACKET




B LEG



C PIVOT BLOCK



D MOUNTING BLOCK

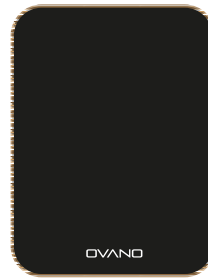

E TABLE TOP
(OPTIONAL)



F 5 X
COUNTERSUNK
SELF DRILLING
SCREW FOR
THE B PILLAR



G 1 X M6 65MM
SOCKET
HEAD CAP
SCREW
FOR THE PIVOT
BLOCK



H 2 X M6 X 16MM
CROSS
DOWEL NUT
FOR THE PIVOT
BLOCK




I 2 X THUMB
SCREW
FOR THE PIVOT
BLOCK



J 8 X #22 POZI
ROUND
FOR THE
MOUNTING
PLATE


PLEASE CHECK
ALL PARTS
BEFORE ASSEMBLY.
ONLY USE
EQUIPMENT PROVIDED.

01.

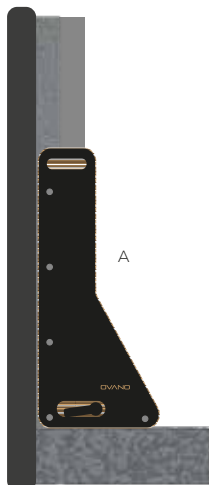

Remove leg from bracket and line up the bracket to the inner corner against B post and rubber trim of your van. behind the passenger side door.

02.

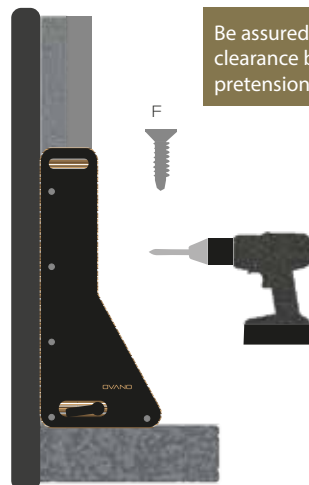

Using self drilling screws, attach bracket to B post with your battery screwdriver through the 5 screw holes in the bracket, be careful not overtighten the screw, use a handheld screwdriver to finish.