



03.

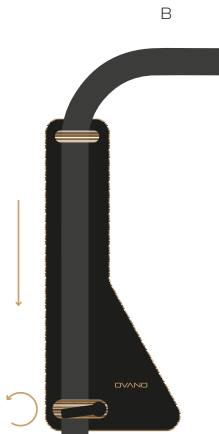


Once attached insert table leg into the holes in the bracket. Gently adjust the cam lock bolt at base of the bracket, clamp into position.

04.

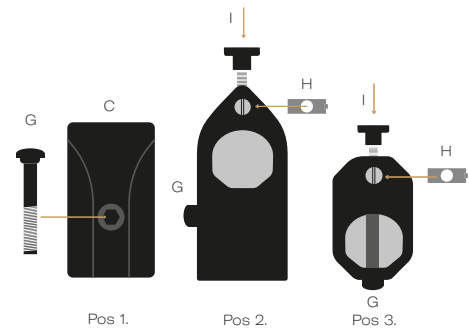


Pos 1 - Screw in the location bolt to the base of the pivot block.
 Pos 2 - Place a cross dowel nut into the hole and insert thumb screw to lightly secure.
 Pos 3 - Place the other cross dowel nut into the hole and insert thumb screw to lightly secure.

05.

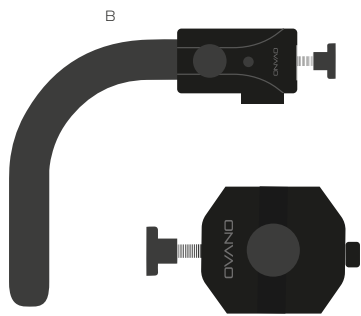

Slot pivot block onto the table leg with cross dowel nuts in position and tighten thumb screws to attach and adjust as required.


06.

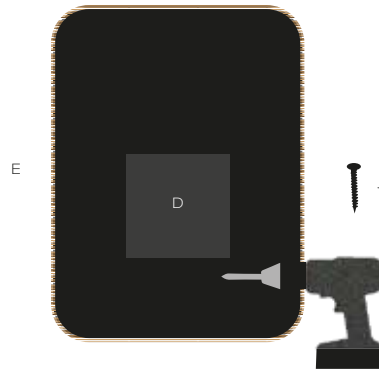

Attach mounting plate to table top as required. If using the Ovano table top we suggest it is placed centrally, 13.5cm from table end nearest the door, using the 8 x PH2 round screws to secure in place.

Please note you need to allow for the table top to pivot outside the van without hitting the B pillar.

07.

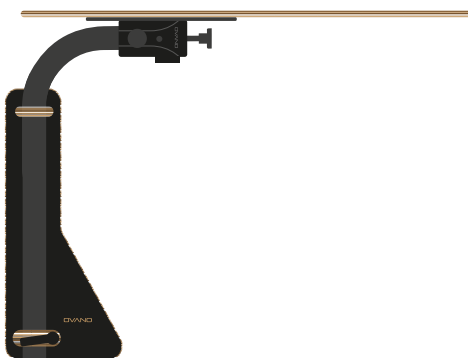

Place mounting plate onto pivot block and tighten using thumbs screws to secure.

08.



We recommend you stow the table in the position shown above or completely remove.

THIS TABLE IS NOT TO BE USED WHILE THE VEHICLE IS IN MOTION