



02.

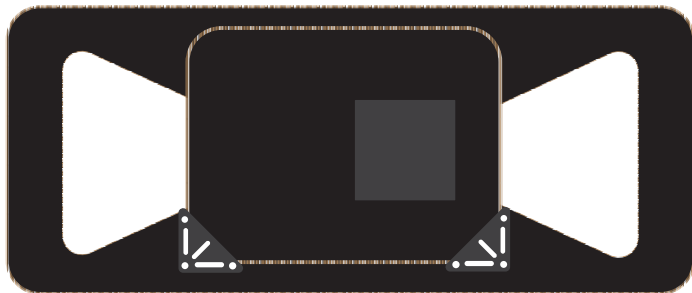


WITH THE TABLE HELD IN PLACE, POSITION THE BRACKETS ON THE BOTTOM EDGE.

04.

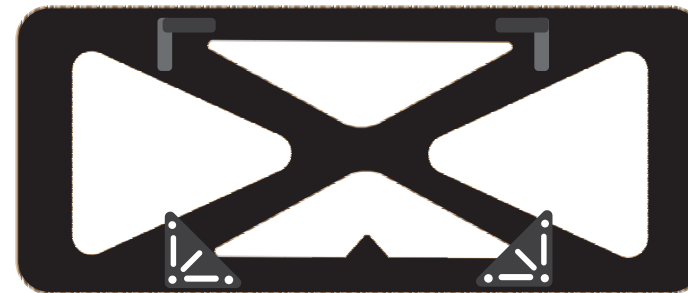


USE THE BRACKETS TO HOLD THE TABLE TOP IN PLACE AND AGAIN MARK WHERE THE CLIPS WILL BE ATTACHED USING A SCREWDRIVER. MAKE THE HOLES AND ATTACH THE CLIPS WITH THE 4 BIGGER SCREWS

03.

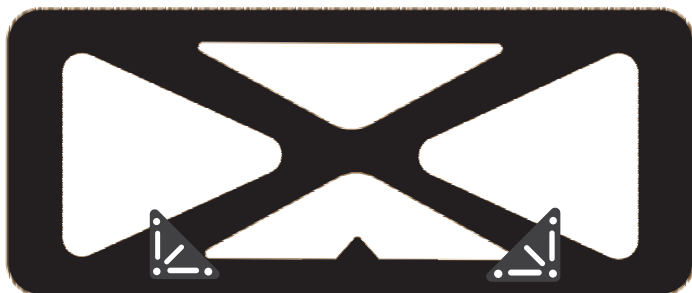

USE A SCREWDRIVER TO MARK THROUGH THE CIRCULAR HOLES FOR THE BRACKETS AND DRILL HOLES INTO SWITCH FOR SCREWS. THEN ATTACH BRACKETS TO THE SWITCH USING THE 6 SMALLER SCREWS.

05.

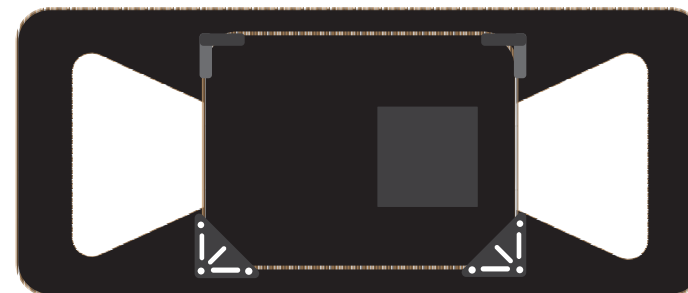

ONCE SECURE, OPEN THE TOP CLIPS TO STORE THE TABLE TOP